


Installation Guideline for the Triumph Tiger 800XC/XCx Soft Luggage Pannier Racks



28 March 2017

Part	Description	Qty
1	Pannier Rack, Left Section	1
2	Pannier Rack, Right Section	1
3	Back Brace	1
4	Cap Screw, M8x20, Stainless Steel	2
5	Cap Screw, M8x50, Stainless Steel (For XCx two M8x30 full thread cap screws are also provided in place of two M8x50 cap screws above)	4
6	Cap Screw, M8x65, Stainless Steel	4
7	Nut, M8, Nyloc, Stainless Steel	6
8	Washer, M8, Stainless Steel	16
9	Spacer, 8mm (M8, OD 20mm), Aluminium	4
10	Wedge Insert (For XCx, some installations only require two of the wedge inserts, where the M8x30 cap screws are used instead. Refer Item 5 above)	4

The installation of the pannier racks is done by executing the following steps sequentially.

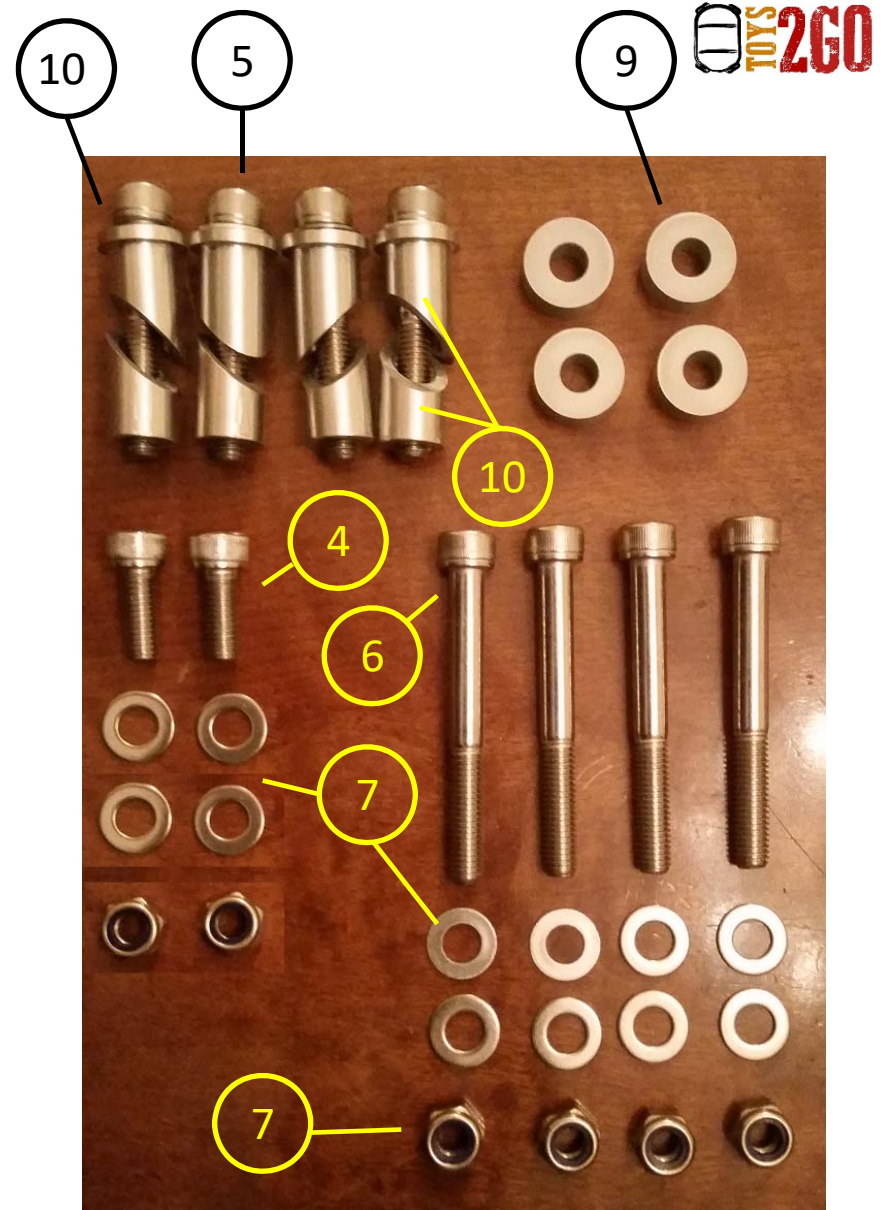


Note: Item 5, two M8x30 cap screws are provided for the XCx Where a full thread for the M8x50 is not available.

Note: Item 10, only two wedge inserts are required on some XCx models where there is a thread on the second hole. Refer Note on Item 5 above.

Step 1

Remove a top box (if applicable).
Release the rear plastic cover by
removing the four securing screws.
Remove the cover.

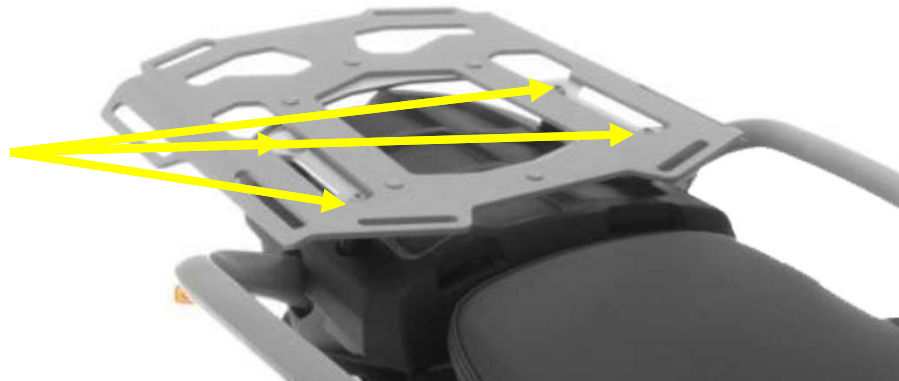

Step 2

Remove the pillion seat.



Step 3

Remove the existing bolts and nuts from the positions shown on **both** sides of the motorcycle. Retain the plate inserts.

Note: Pillion seat and top plate already removed in Steps 1 & 2.



Step 4

Attach the wedge inserts (10) assembled with the M8x50 cap screw (5) and M8 washer (8) onto both the left (1) and right (2) pannier rack as shown. **Do not tighten.**

Note: Some XCx models have a closed threaded hole on one of the mount points. Where a full threaded M8x50 bolt is not provided, the supplied M8x30 bolt is used.



Step 5


With the left pannier rack (1) approximately in position, insert the wedge inserts (10) into the bottom holes of the pillion foot peg bracket. **Do not tighten yet.**



Step 6

Attach the top two attachment points to the motorcycle using the M8x70 cap screws (6), M8 washers (8), 8mm spacers (9) & M8 Nyloc nuts (7). The spacer is located between the pannier rack mount tab and the plate insert retained from Step 3

Tighten these two bolts into position. Press the bottom bracket attachment as shown in Step 6 flush with the foot peg bracket and tighten the cap screws.

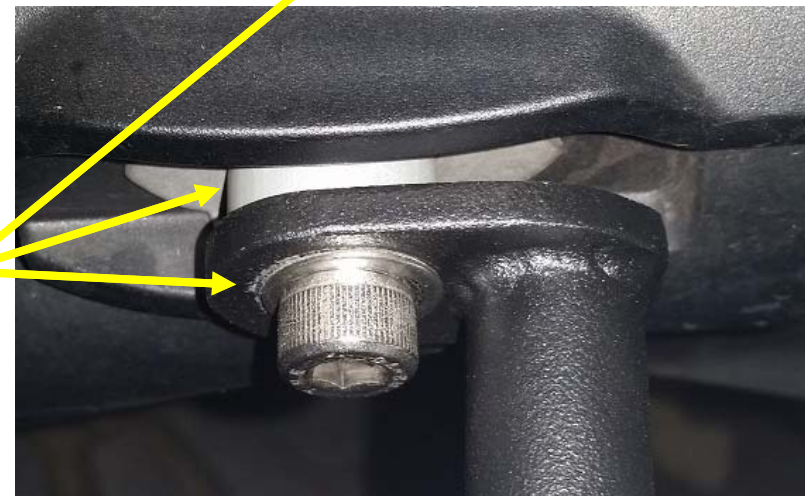

Step 7

Repeat Step 6 for the right hand side of the motorcycle.

Step 8

Position the back brace into position and secure onto the left and right pannier racks using the M8x20 cap screw (4), M8 washers (8) and M8 Nyloc nut (7) on both sides of the motorcycle.

Tighten both bolts.

