

Installation Guideline for KTM 790 / 790R Top Carrier



The installation of the Pannier Rack Set is done by executing the following steps sequentially.

Installation Guideline for KTM 790 / 790R Top Carrier

Part	Description	Qty
01	Top Carrier Frame	1
02	Screw, Button Head, M8x45mm, Stainless Steel	4
03	Screw, Button Head, M8x35mm, Stainless Steel (optional)	2
04	Washer, Flat, M8, Stainless Steel	4
05	Spacer M8 Alu, 30mm	4
06	Spacer M8 Alu, 25mm (optional)	2
07	Panel washers, M8 (optional)	4

Top carrier Rack - Frame



Pannier Rack - Fasteners



The installation of the Pannier Rack Set is done by executing the following steps sequentially.

Step 1

- a. Remove the 4 bolts holding the OEM passenger grab handles (if fitted).
- b. Remove the OEM passenger grab handles.




Step 2

- a. Get the 4 x M8 x 45mm Button Head screws and 30mm spacers ready.
- b. Position the Top Carrier over the bolt holes - the 4 slotted holes in the Top Carrier must line up with bike frame holes (Top Carrier frame in picture is early development model.)
- c. Start inserting the bolts through the Top Carrier and through the spacers and tighten loosely. Remember to add the washers on top of the Carrier plate (use larger panel washers, if preferred)
- d. Do all 4 sets of bolts and spacers, but do not tighten yet.

Notes:

To adjust the angle of the Top Carrier, use the alternative shorter spacers and bolts in the rear position.

This job is made much easier if installed by 2 people.

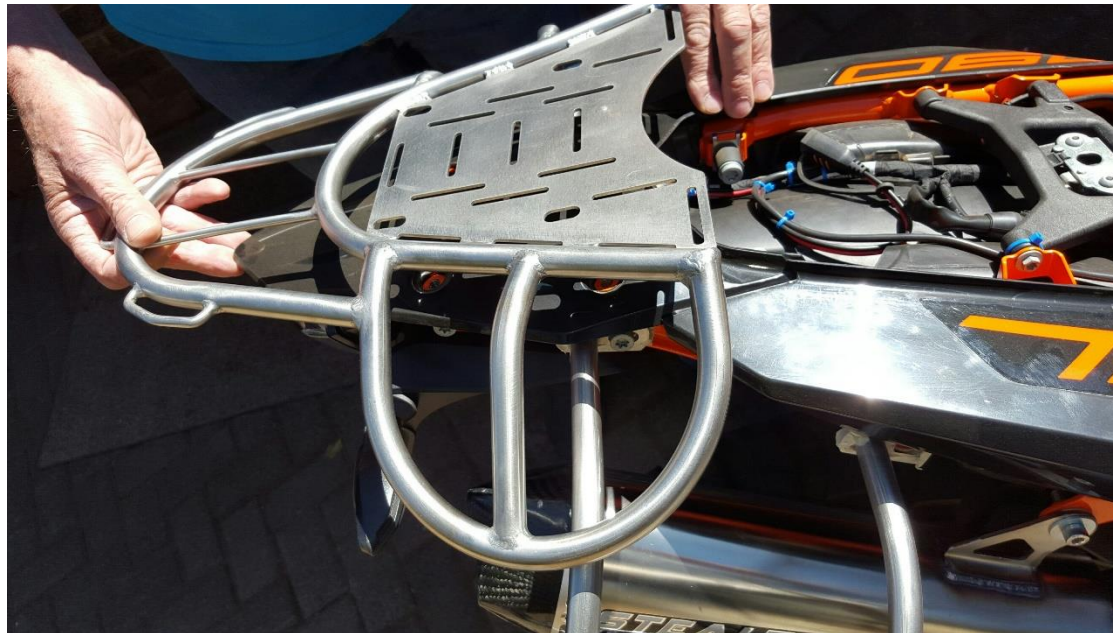

Step 3

- a. Position the Top Carrier correctly and start tightening all 4 bolts until Top carrier is held securely in place.
- b. Avoid stripping threads by over tightening. Check manufacturer's torque specifications if in doubt.
- c. Use mild strength thread locker, if deemed necessary.



Step 4: Admire your work.

